

KRAIBURG mats for other surfaces

profikURA Flex / profikURA Form / KURA Flex / KURA Form / pediKURA Form / SIESTA

Prerequisites:




Concrete area:

- Min. 10 cm thick and smooth
- No holes
- No ridges
- profikURA/pediKURA: max. 6% slope
- KURA/SIESTA: max. 3% slope

Mats:

Even temperature:
min. 5°C to max. 30°C
(store according to initial temperature)

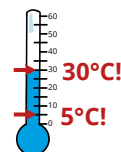

Mastic asphalt:


- Max. 3 cm thick
- Ground: min. 10 cm thick, solid concrete layer




The mastic asphalt will more or less change shape during use.

You will need:


Measuring:

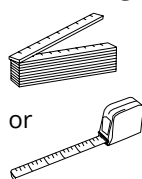


Marking:



Cutting:

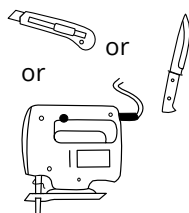

Drilling and installing:

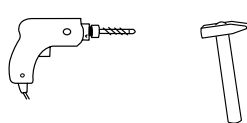

KRAIBURG fixings:

Concrete:

Nail plugs \varnothing 10 x 80 mm - A2 with
Washers \varnothing 30 mm - A2

Mastic asphalt:



Nail plugs \varnothing 10 x 120 mm - A2 with
Washers \varnothing 30 mm - A2




(profikURA Flex / profikURA Form / KURA Flex / KURA Form / pediKURA Form: Fixings are part of the delivery)



profikURA Flex, KURA Flex and SIESTA can be versatily combined using the puzzle interlock system:

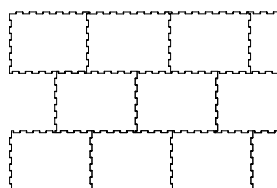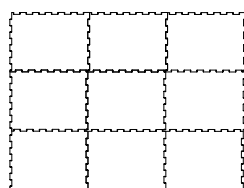

profikURA Form / KURA Form / pediKURA Form are supplied with an installation plan (for reasons of technical feasibility, adjoining areas are not interconnected as standard by a puzzle interlock system)

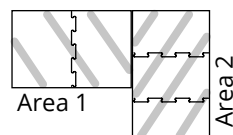

Mobile manure removal and compatibility with vehicle traffic:

Comply with the **KRAIBURG vehicle traffic specifications**




Tip: To facilitate tensionless installation, we recommend dividing up large areas evenly and leaving a joint of max. 2 cm at least every 12 m


1 Install mats




Start at a straight edge!

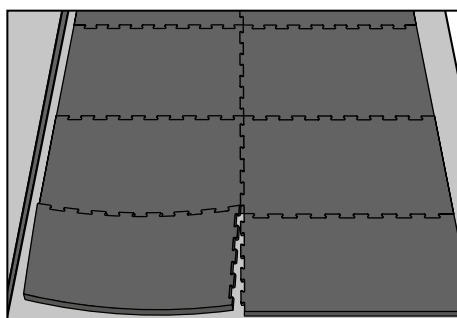

Install the complete area

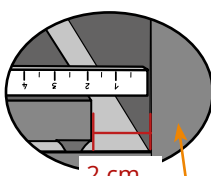


Distance to the side edge:
2 cm
(min. 1 cm - max. 6 cm)

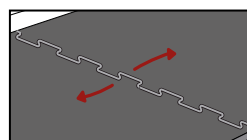


Loosely interconnect the mats, lift them slightly and pull them apart gently



Avoid creating tension!

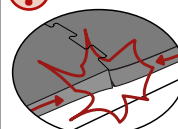

DO NOT PRESS!

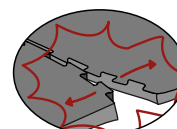

DO NOT PULL ON ONE SIDE ONLY!




At low temperatures: Pull the puzzle interlock system apart to create a visible gap



About ① Install mats in the milking parlor

The mats are fixed on one side as standard (nail plugs) to make occasional cleaning underneath the mats easier.

It is also possible to fix the mats all the way round.

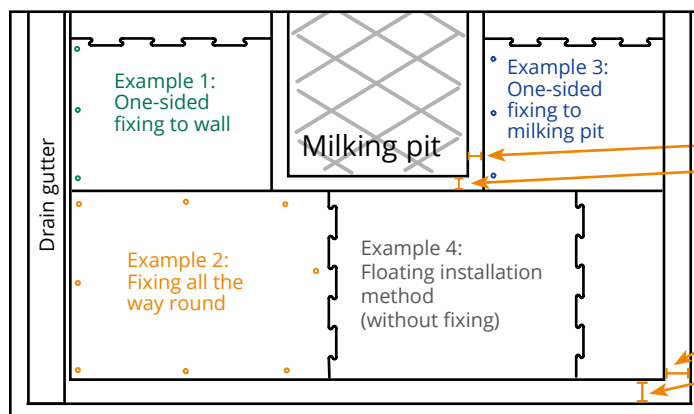

Distance to the milking pit: 1 cm

Milking pit


1 cm

Distance to the wall: 2 - 4 cm


Side wall

2 - 4 cm

② Adapt

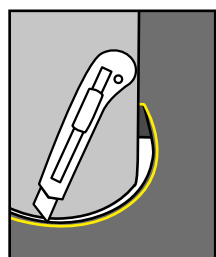

If necessary, cut mats to fit

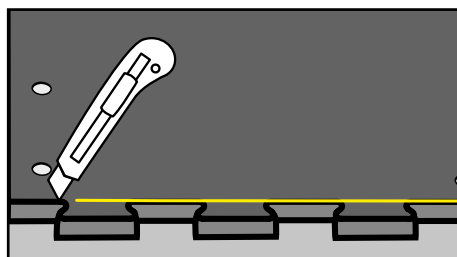


Any excess puzzle pieces can be cut off at the start and end of an area.



Tips for cutting:

- Moisten the blade slightly
- Pull mat parts apart slightly
- Use pliers to grab small pieces
- A jigsaw is best suited for cutting **profikURA** and **pedikURA**

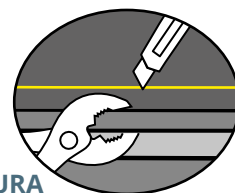


③ Fix


! **Concrete:** Nail plugs \varnothing 10 x 80 mm
Mastic asphalt: Nail plugs \varnothing 10 x 120 mm

! **If some mats are cut to fit on site:** Fix additionally at comparable distances along the cutting edge!



Fix through the pre-fabricated holes:

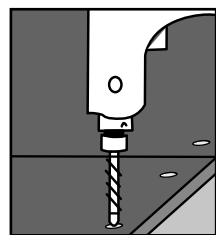


Drill

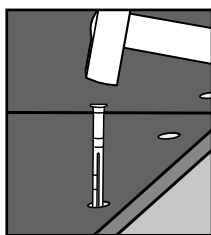

Knock the plastic plugs in flush

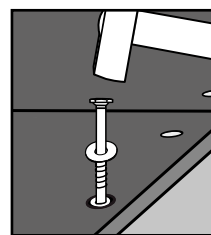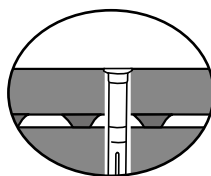

Knock in nails and washers until they are seated evenly and firmly and are slightly countersunk

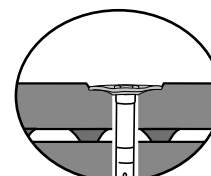



SIESTA:

Small areas up to 15 m² can be installed without fixing.



Tip:

Check if the fixing can be felt by sliding a flat metal object (e.g. a hammer) over it. If the fixing can still be felt, knock it in deeper!

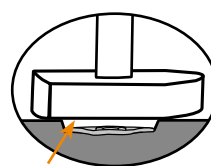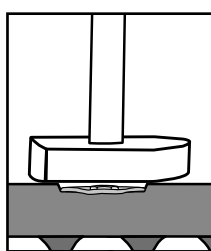

A small gap should be visible



Do not knock in too deep!

Tension should not develop, the mat should not bulge!

